

Ottoman Wheels

Wheels are included as an option to the preinstalled feet on your ottoman.

- 1.** Remove the installed feet by removing the screws from the feet. Do not reuse screws.
- 2.** Using supplied fasteners, fasten wheels to wood frame of the ottoman. Position steel attachment plate approximately 3/4" from each edge at the corner.